


## ***Under-sink Water Outlet Installation:***




**Step 1:**  
Locate hot water supply line and valve under sink. Turn off valve

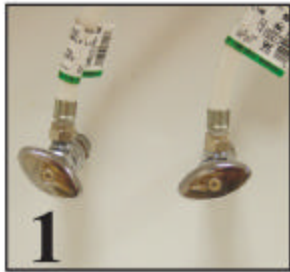

**Step 2:**  
Using the proper tools remove the sink supply tube/hose from the valve.



**Step 3:**  
Connect the 3-way adapter and outlet hose to the valve.

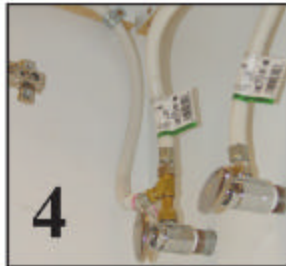

**Step 4:**  
Re-connect the sink supply tube/hose to the top of the adapter. (If this hose/tube is old or damaged it is a good idea to replace it at this time. They are inexpensive and readily available at your local home center.)



**Step 5:**  
Tighten all fittings, do not over-tighten. Turn on the valve and check for leaks.



**Step 6:**  
Using the hook and screw provided attach the solution hose to the cabinet to provide strain relief for the 3-way adaptor.



**Step 7:**  
Attach hose hanger to cabinet or leave hose coiled on cabinet floor.

## ***Faucet Adapter Installation Instructions:***



**Step 1:** Remove aerator from faucet in sink. (This can usually be done by hand but may require pliers. If you need to use pliers be sure not to mark the finish on the aerator as you remove it.) Be sure the gasket comes out with the aerator.



**Step 2:** With the gasket provided screw the adaptor into the faucet.



**Step 3:** The solution hose will now screw directly to the adaptor.



**Step 4:** When finished, remove hose and adaptor and re-install aerator. (It is a good idea to clean out the aerator prior to re-installation.)



**Note:** If the standard faucet adaptor does not fit your sink universal adaptors are available.